


Добрый день, прошу помочь настроить частотный привод для насоса **3х400V 50Hz 0,37kW 0,76A**
 Темпер датчик дтс50М (-50...180⁰С) с нормирующим преобразователем 4...20мА (0...100⁰С)
 подключен по схеме рис.7.2 пособия по программированию ПЧВ на кл.60. Клеммы 42-55 пустые
 Управление от тумблера на кл.18(пуск),

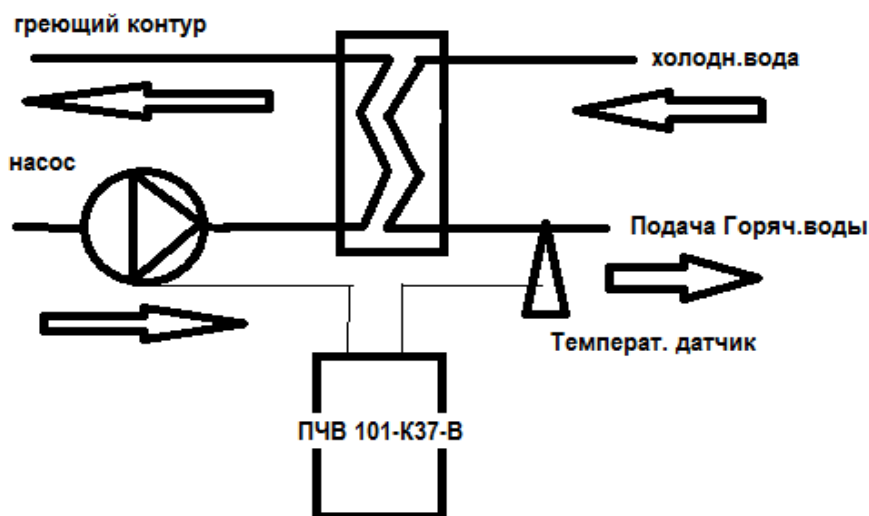

0-03	0		1-50	0		3-00	0		4-58	1
0-04	0		1-52	0		3-02	0		4-61	0
0-10	1		1-55	0		3-03	100		4-63	0
0-11	1		1-56	0		3-10	55			
0-12	20		1-60	100		3-11	20		5-10	8
0-31	0,00		1-62	100		3-12	0		5-11	0
0-32	100,0		1-63	100		3-14	55		5-12	0
0-40	1		1-71	1		3-15	0		5-13	0
0-41	1		1-72	2		3-16	0		5-15	0
0-42	1		1-73	0		3-17	0		5-40	10
0-50	0		1-80	0		3-18	2		5-55	20
0-51	0		1-82	0		3-40	0		5-56	50
0-60	0		1-90	0		3-41	3,0		5-57	0
0-61	0		1-93	0		3-42	3,0		5-58	50,0
1-00	3					3-50	0			
1-01	0		2-00	0		3-51	3,0		6-00	1
1-03	0		2-01	0		3-52	3,0		6-01	0
1-05	2		2-02	0		3-80	3,0		6-10	-
1-20	0,37		2-04	0		3-81	3,0		6-11	-
1-22	400		2-10	0					6-12	-
1-23	50		2-11	440		4-10	0		6-13	-
1-24	0,76		2-16	0		4-12	20		6-14	-
1-25	1400		2-17	0		4-14	50		6-15	-
1-29	0		2-20	0		4-16	100		6-16	-
1-30	-		2-22	0		4-17	100		6-19	-
1-33	-					4-50	0			
1-35	-					4-51	2,0			

[illegible]